


Removal


- 1 Remove exhaust system (49-100).
- 2 Disconnect return spring on bracket (2).

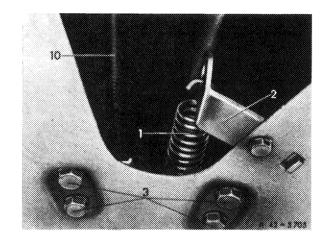


3 Unscrew adjusting screw (3) on adjusting bracket (1).

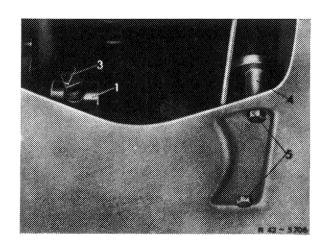

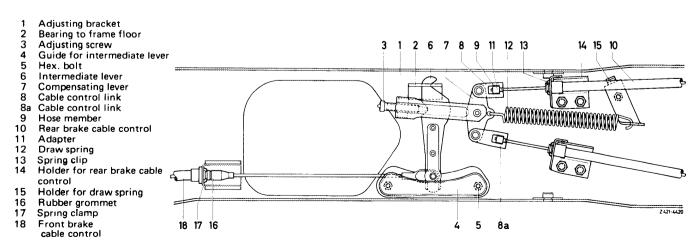


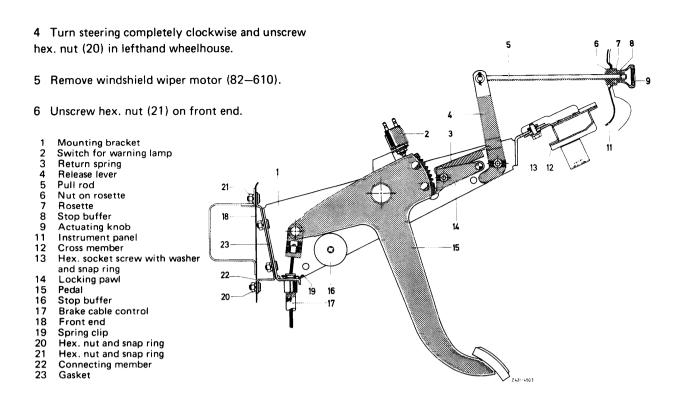


- 7 Unscrew actuating knob (9) for manual release, then remove stop buffer (8).
- 8 Unscrew cover under instrument panel in leg room (3) and pull downwards.

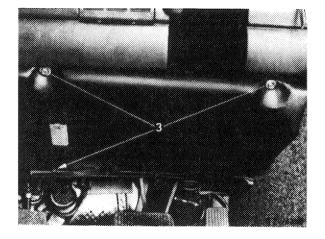

9 Push out leg room lamp (4), remove plug and pull cable out of cover.

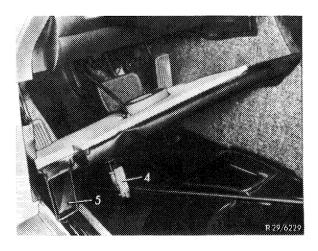

- 10 Disconnect brake cable control (17) from pedal link. Remove spring clip (19) and brake cable control.
- 11 Remove cables from cable band.
- 12 Loosen plug connection on switch (2) for warning light.
- 13 Unscrew hex. screw (13) from cross member (12) and remove complete pedal assembly with connection (22).

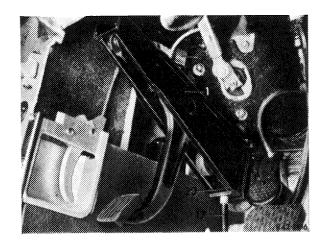


Installation


14 Attach pedal assembly in lefthand wheelhouse, at front end and on cross member under instrument panel, while inserting linkage for manual release into bore of instrument panel.


15 Install windshield wiper motor (82-610).

- 16 Attach brake cable control (17) into pedal link and insert spring clip (19) into cable guide.
- 17 Attach plug connection to switch for warning light. Check warning light for function.
- 18 Attach cable harness with cable strap to pedal assembly.
- 19 Insert stop buffer (8) into groove of pull rod (5) and screw actuating knob (9) for manual release on linkage.

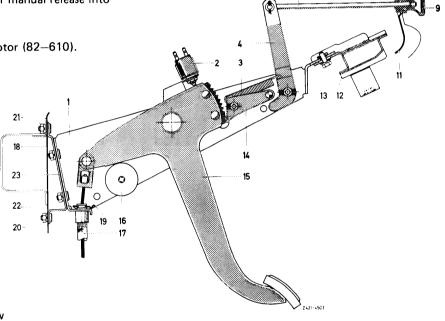

20 Pull cable for leg room lamp through cover, attach plug and push leg room lamp (4) into cover.

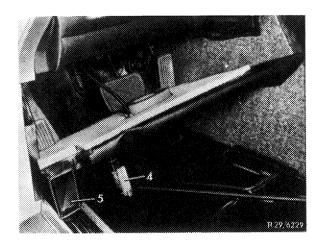

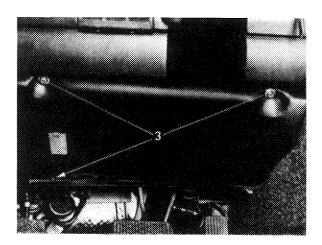

- 22 Attach restoring spring (1) to bracket (2).
- 23 Adjust parking brake (42-540).
- 24 Install exhaust system (49-100).

