



### Removal

---


- 1 Remove exhaust system (49–100).
- 2 Remove draw spring (1) on bracket (2).

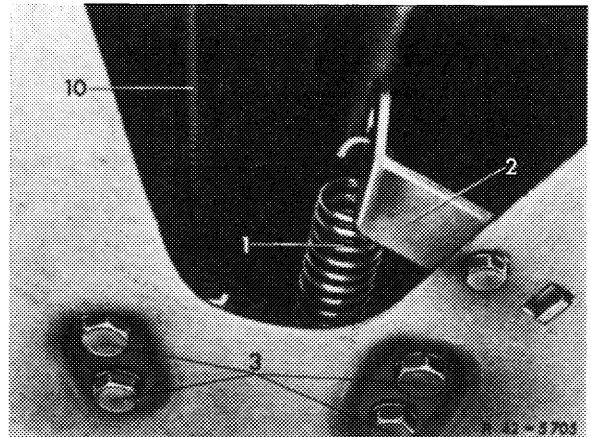

- 3 Unscrew hex. bolts (5) for attaching guide (4) for intermediate lever (6).
- 4 Completely unscrew adjusting screw (3) of adjusting bracket (1).

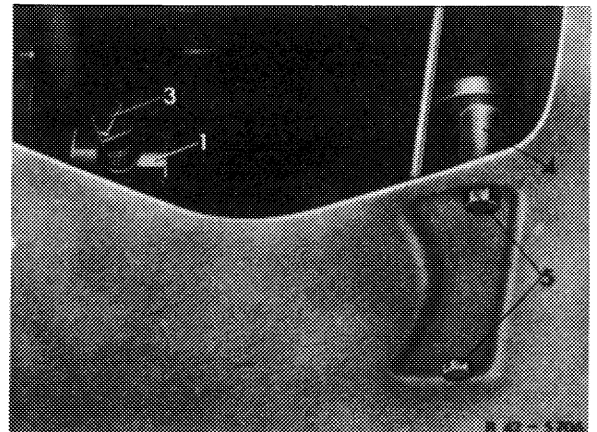


- 5 Disconnect intermediate lever (6) on bearing of frame floor (2) and remove from adjusting bracket (1).
- 6 Loosen brake cable control on intermediate lever (6) by pulling cotter pin out of flange bolt and remove flange bolt.

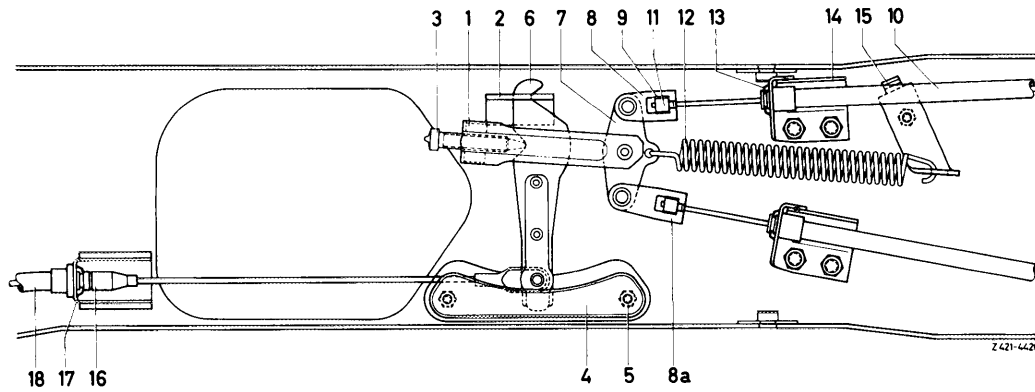


- |                                |                             |  |                              |
|--------------------------------|-----------------------------|--|------------------------------|
| 1 Adjusting bracket            | 7 Compensating lever        | 12 Draw spring                         | 15 Holder for draw spring    |
| 2 Bearing on frame floor       | 8 Cable control link        | 13 Spring clamp                        | 16 Rubber grommet            |
| 3 Adjusting screw              | 8a Cable control link       | 14 Holder for rear brake cable control | 17 Spring clamp              |
| 4 Guide for intermediate lever | 9 Hose member               |  | 18 Front brake cable control |
| 5 Hex. screw                   | 10 Rear brake cable control |  |                              |
| 6 Intermediate lever           | 11 Adapter                  |  |                              |

7 Remove spring clamp (17) from cable control and pull brake cable control (18) out of holder.

8 Unscrew cover under instrument panel in leg room (3) and pull downwards.

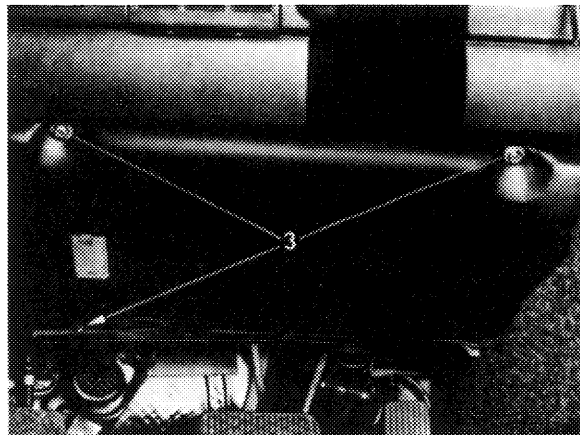


9 Push out leg room lamp (4), remove plug and pull cable out of cover.

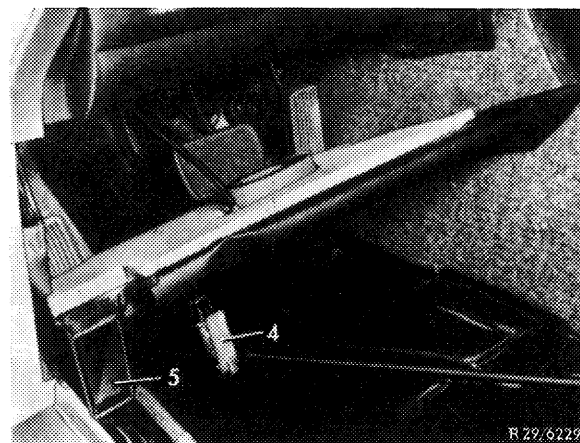

10 Disconnect brake cable control (17) from pedal link, remove spring clamp (20) from cable guide and brake cable control from pedal assembly.

11 Pull brake cable control out of frame floor toward the rear.

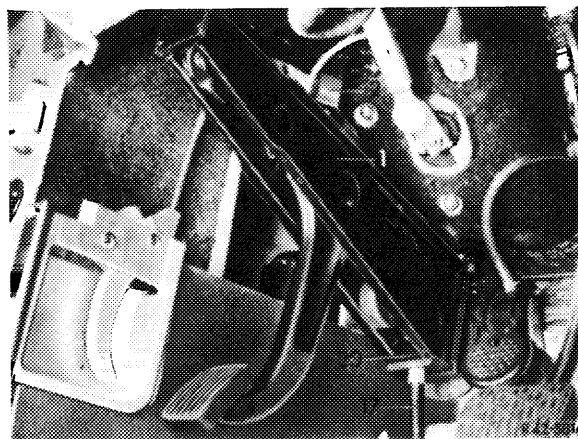

## Installation

12 Introduce brake cable control from below through frame floor and attach rubber grommet.

13 Attach brake cable control (17) to cable control link of pedal and insert spring clamp.

14 Pull cable for leg room lamp through cover, attach plug and push leg room lamp (4) into cover.


15 Introduce leg room cover and screw down.

16 Introduce cable guide into holder on frame floor and attach with spring clamp (17).


17 Place rubber grommet (16) on cable guide.

18 Attach brake cable control to intermediate lever with flange bolt and secure.

19 Introduce intermediate lever (6) into adjusting bracket (1). Then attach intermediate lever to bearing on frame floor (2).

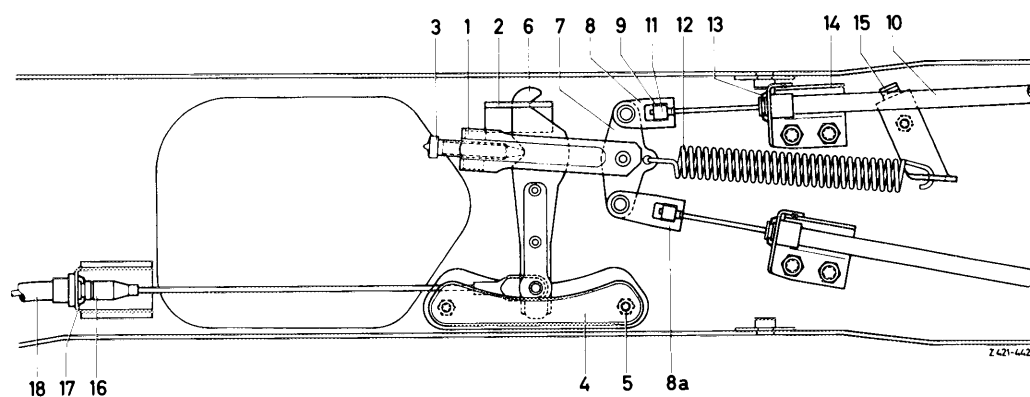

20 Screw-on guide for intermediate lever (4).

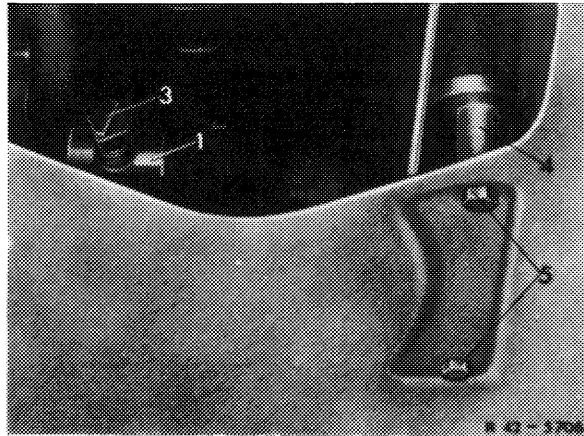

21 Attach draw spring (1) to bracket (2).

22 Adjust parking brake (42–540).

23 Install exhaust system (49–100).

