

Conventional tool


Screwdriver (Torx)

e.g. Hazet, D-5630 Remscheid
837/T 15

Note


The following relays and the overvoltage protection of ABS can be exchanged with ignition switched off:

- a) Motor relay (15)
- b) Valve relay (16)

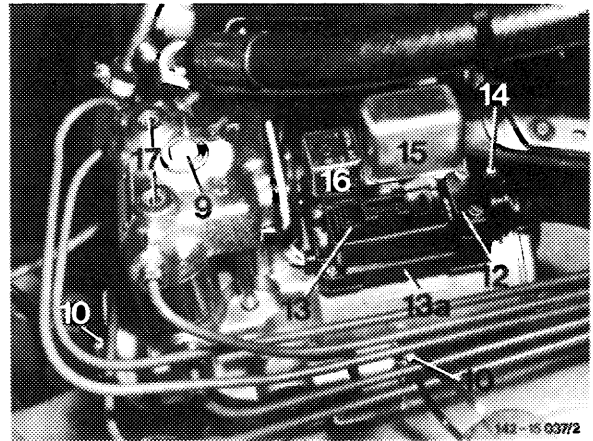

Hydraulic unit

- c) Relay for voltage supply of electronic control unit (50).
- d) Overvoltage protection (51).

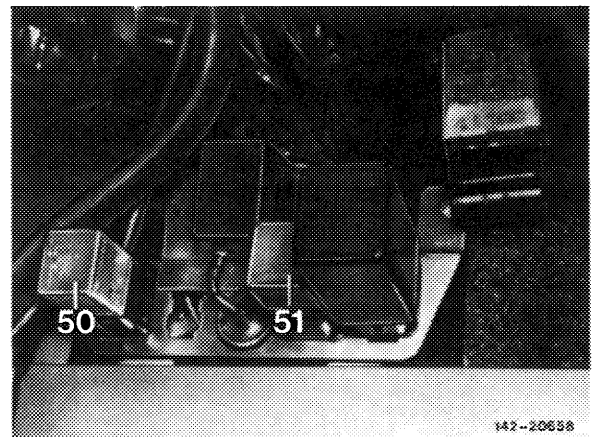

Note: The relay and the overvoltage protection are located on side of front passenger in legroom at the right behind lining.

An overvoltage protection with integrated relay for voltage supply of electronic control unit and an exchangeable fuse are installed since September 1981.

A modified overvoltage protection with an additional pin 87 for the CIS-E injection system is installed since September 1985.

The overvoltage protection has 7 pins since September 1986.