


54-251 Removal and installation of indicating instruments

Removal

- 1 Remove instrument cluster (54-250).
- 2 Remove tachometer (54-253).

Note: The indicating instruments for temperature, fuel and oil pressure can be exchanged complete only.

- 3 Loosen fastening screws (2) of righthand switch plate and completely remove switch plate with indicating instrument.

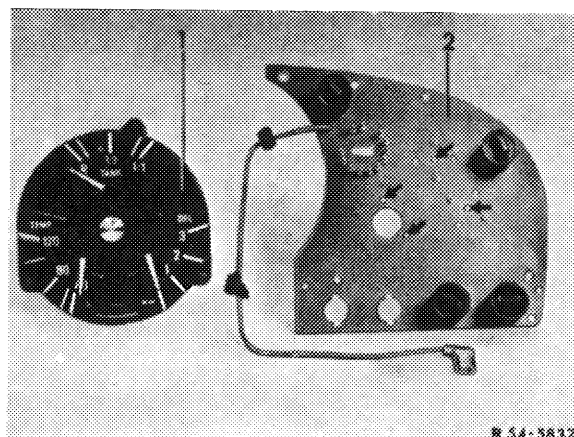

- 4 The indicating instrument can be removed after loosening screws and nuts from switch plate.

Installation

- 5 For installation proceed vice versa.