


## 54–525 Checking cable control

---

1 Remove air cleaner (not required for engines 110.98, 616 and 617).

2 Advance control linkage to full throttle, the wire strand (8) should move within cable control envelope for approx. 20 mm without any resistance.

3 Check adjustment, wire strand should rest against control free of tension at lowest possible play.

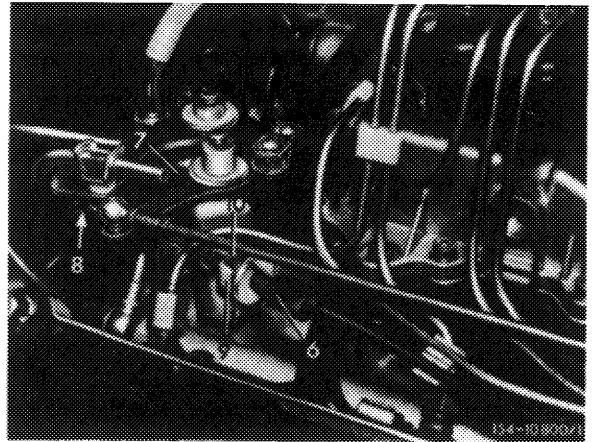

4 Replace cable control at the slightest suspicion of strain (54–555).

5 Adjust cable control, if required (54–560).

6 Reinstall air cleaner.