


## 54–545 Removal and installation of switch

---

### Removal

---

- 1 Remove combination switch.
- 2 Remove switch (1) from combination switch (2).

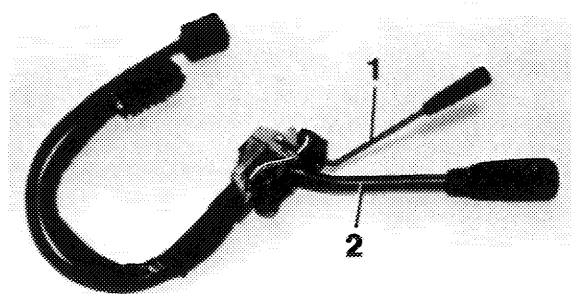

154 - 11976/1

### Installation

---

- 3 For installation proceed vice versa.
- 4 Perform function test on road.