

54-545 Removal and installation of switch


A. Models 107, 123

Removal

- 1 Remove combination switch.
- 2 Remove switch (1) from combination switch (2).

Installation

- 3 For installation proceed vice versa.
- 4 Operational checkup on road.

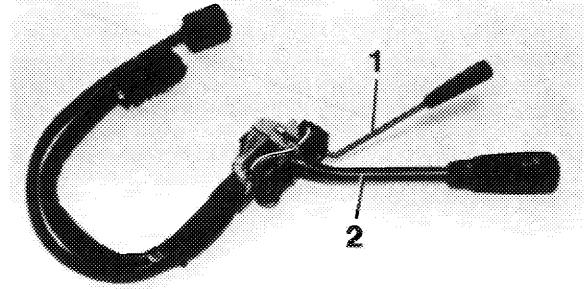

154-11976/1