
Removal

- 1 Disconnect battery.
- 2 Remove cover under instrument panel on driver's side.
- 3 Pull coding plug R 29 from control unit N 4/2, while compressing the two lateral locking lugs.

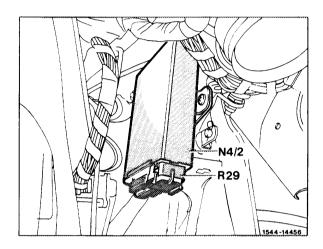

Installation

- 4 For installation proceed vice versa.
- 5 Perform function test on road.