


67–410 Removal and installation of window opener for rear crank-type window

Removal

- 1 Remove side wall in rear of vehicle (68–456).
- 2 Remove side window in rear of vehicle (67–400).
- 3 On electric window opener, loosen electrical connections on cable connector (1).
- 4 Remove reel (2) of safety belt.
- 5 Unscrew three fastening nuts (3) from window opener.

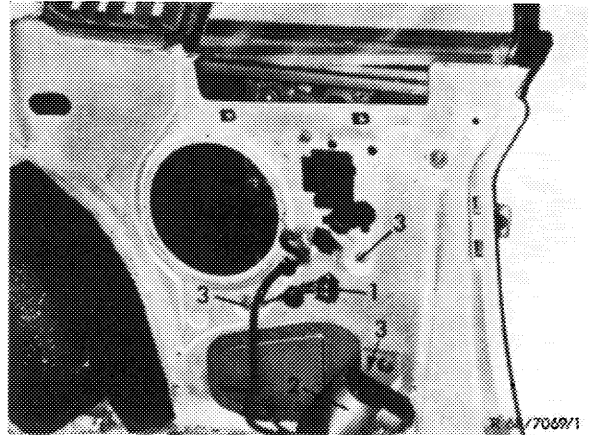

Installation

- 6 For installation proceed vice versa.