

Trimstrip Left and Right

Removal

- 1** Remove instrument cluster at lefthand trimstrip.
- 2** Remove glovebox at righthand trimstrip (68--140).
- 3** Pull knob from lever of ring nozzle.
- 4** Pull connecting hose from ring nozzle.
- 5** Unscrew both nuts on lever assembly from inside.
- 6** Remove trimstrip.

Installation

- 7** For installation proceed vice versa. Make sure that the lever assembly is again screwed back together with trimstrip.

Trimstrip Center

Removal

- 1** Remove instrument cluster (54--310).
- 2** Remove glovebox (68--140).
- 3** Pull off knob for actuating summer air nozzle.
- 4** Pull duo clips from trimstrip from inside with small screw driver.
- 5** Remove trimstrip.

Installation

- 6** For installation proceed vice versa. Be sure to use new clips.