


## 68–140 Removal and installation of glovebox

---

### Removal

---

- 1 Pull out glovebox light together with plug and pull off plug socket.
- 2 Remove pin of expanding clamps.
- 3 Remove expanding clamp with plastic wedge.
- 4 Remove glovebox.

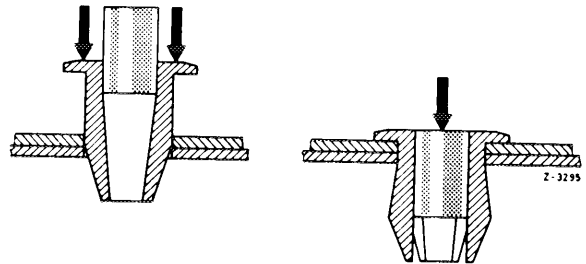

### Installation

---

- 5 For installation proceed vice versa.