

Removal


- **1** Remove coupe top and place turned-around on a suitable work bench.
- 2 Unscrew screws (1) and remove lower trimstrips (2)

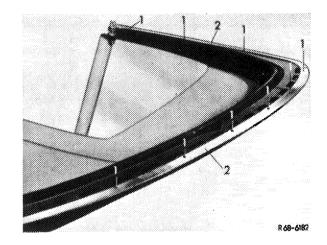


- 3 Turn coupe top around.
- **4** Push lateral trimstrip (3) out of lower clip with plastic wedge.

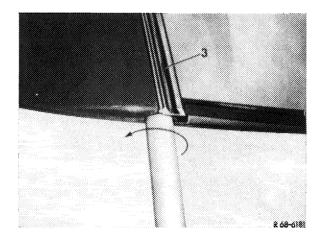

5 Pull trimstrip (3) out of remaining clips starting from below and using the plastic wedge.

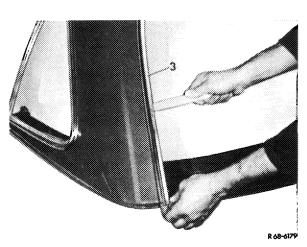

- **6** Lift upper trimstrip (4) and pull trimstrip (3) out of connecting piece in downward direction Watch out for plastic support in corner.
- **7** Remove upper trimstrip (4) similar to lateral trimstrip.

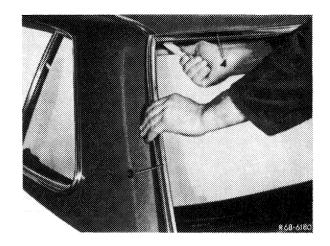

Installation

8 For installation proceed vice versa.

Note: Make sure that the sealing strip on contact surface of pane is correctly pulled into trimstrip and that the plastic support is installed in upper corners of trimstrips.