

Removal

1 Remove door lining (72–100).


2 Remove door sheeting.

Note: On electric window opener: loosen connections on cable connector.

3 Remove screws (1) on window lifting rail.

4 Pull up window and clamp with wedge.

5 Remove screws (11) and remove window opener.

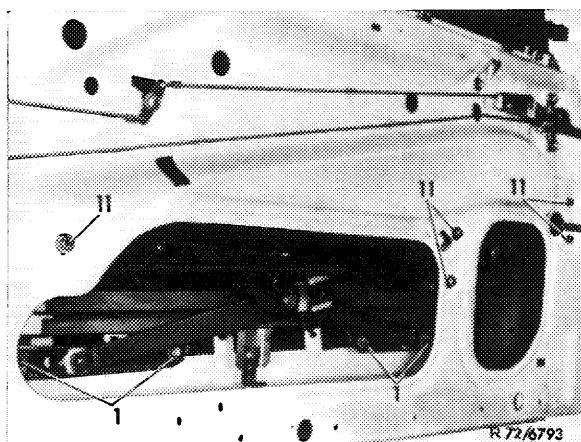

Installation

6 For installation proceed vice versa.

Note: First insert window opener together with crankpin.

7 Then adjust crank window (72–195).