

## 72–260 Removal and installation of striker eye

---

### Removal

---

- 1 Unscrew fastening bolts and remove striker eye together with compensating shims.

### Installation

---

- 2 Insert striker eye and slightly tighten bolts.
- 3 Close door so that the striker eye can align itself in relation to striker pin.

**Note:** If required, correct position of striker eye in relation to compensating shims. Compensating shims are available 0.5 and 1.5 mm thick.

- 4 Adjust closed door in such a manner that door is flush with outer skin or projects by max. 1 mm.
- 5 Open door and tighten striker eye.

**Note:** Grease newly installed striker eyes with **SHELL RETINAX G.**