

## 75–200 Removal and installation of top well cover

---

### Removal

---

- 1 When cover is used again, identify location of hinge lever in relation to cover.
- 2 Remove screws from hinge levers.
- 3 Remove top well lid.

### Installation

---

- 4 For installation proceed vice versa.

Adjust stop screw in such a manner that the cover can be closed under moderate pressure and is in alignment with the adjacent body members.