

## 75–260 Conversion of guide bearing with pull rod

---

### Note

---


In the event of repairs, install new guide bearing with pertinent pull rod (75–240).

### For Conversion Proceed as Follows

---

- 1 Remove guide bearing with pull rod (75–140).
- 2 Refinish two oblong holes for receiving holder for pull rod in floor side member.

Layout of oblong holes in floor side member.

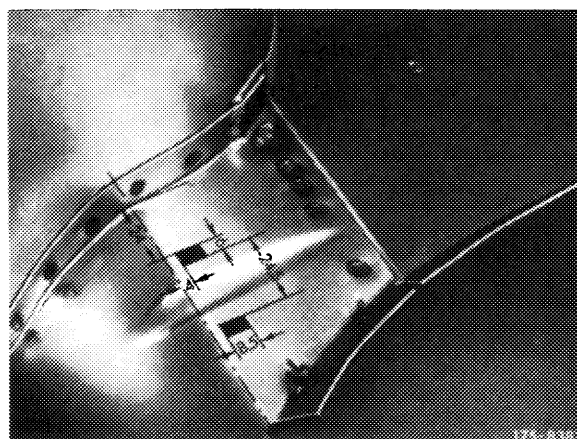

- 3 Push holder from the rear over pull rod and push into oblong holes.
- 4 Install guide bearing with pull rod (75–240).

### Spare Parts

---

Guide bearing	Part No. 107 750 04 41
Pull rod	Part No. 107 758 08 23
Holder	Part No. 107 758 00 14

---

Responsible for delivery: ET Sindelfingen