


Removal

Tank flap with holding clip

- 1 Remove both screws (1).
- 2 Remove tank flap (4) with holding clip (3).

Tank flap without holding clip

- 3 Remove both screws (2).

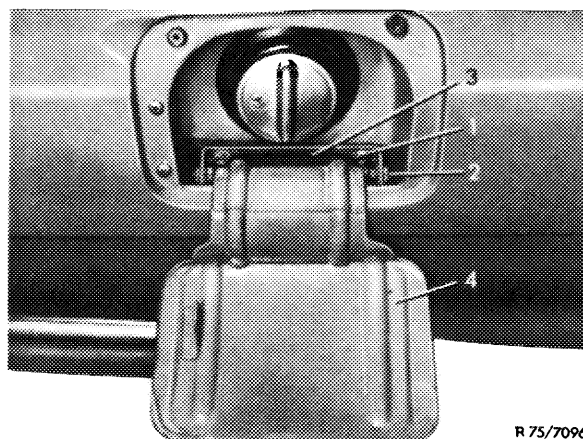

Installation

- 4 For installation proceed vice versa.

Make sure that the sealing washers under holding clip are correctly installed. Then adjust tank flap.