


Removal

1 Loosen the two fastening screws (2) of cover plate (1). Lift cover plate (1) inside, push slightly outwards and remove.

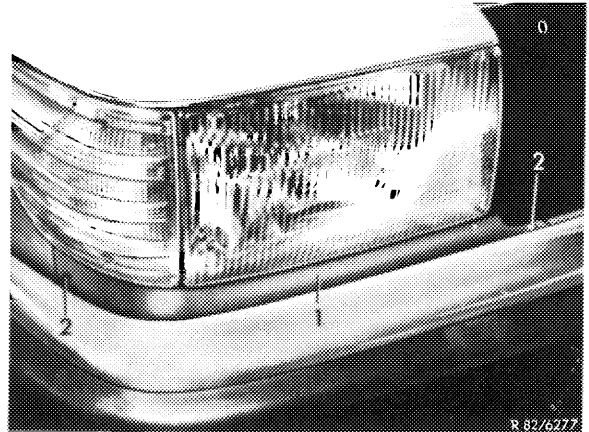


2 Loosen all three fastening screws (5). Push light unit slightly downwards and swivel in outward direction.

Note: To swivel headlamp unit, the bumper may require loosening and pushing slightly downwards.

Pull off electric plug connection at the rear.

- 3 Adjusting screw for lateral adjustment
- 4 Adjusting screw for height adjustment
- 5 Fastening screws for headlamp unit

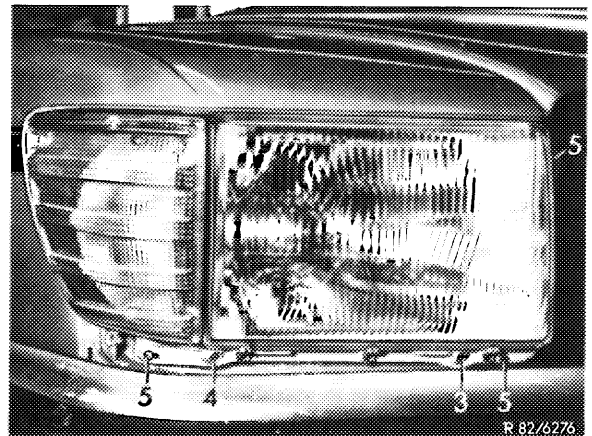

Installation

3 For installation proceed vice versa.

(USA) version

- 1 High beam
- 2 Low beam (dimmer)
- 3 Turn signal lamp and side marker lamp
- 4 Clearance and standing light
- 5 Fog lamp

