


## 82-830 Renewing heating pad of seat heating system

---

- 1 Remove front or rear seat.
- 2 Remove covering from seat or backrest.
- 3 Mark location of heating pad on rubber hair support.
- 4 Separate heating pad from rubber hair support and remove.
- 5 Tack new heating pad to rubber hair support.
- 6 Put back covering, while pulling electric line of heating pad through eyes.
- 7 Reinstall front or rear seat.

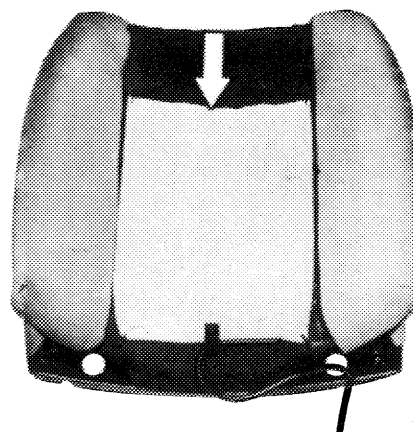

191-10852/h