

88–200 Removal and installation, disassembly and assembly of front bumper

Removal

- 1 Remove air grill under bumper (88–410).
- 2 Remove one screw each on holder laterally inside on fender.
- 3 Remove screws on front holder.
- 4 Remove bumper with holder.

Disassembly

- 5 Remove the two nuts of the protective rubber rail from inside.
- 6 Pull off protective rubber rail.
- 7 Remove cover strip on bumper joint.
- 8 Unscrew both strips from reinforcement.

Assembly

- 9 For assembly proceed vice versa.

Installation

- 10 For installation proceed vice versa.

Note: For adjusting the bumper, the two front holding brackets between the cross beam and the front bumper can be laterally shifted.