

## 88–310 Removal and installation of cable control for engine hood

---

### Removal

---

- 1 Remove lining under instrument panel.
- 2 Unscrew handle for hood cable control.
- 3 Disconnect hood cable control on handle.
- 4 Disconnect engine hood cable control at front on lower portion of lock.
- 5 Loosen cable strips on engine hood cable control.
- 6 Remove cover plate above windshield wiper motor.
- 7 Pull-out hood cable control with rubber sleeve in engine compartment.

### Installation

---

- 8 For installation proceed vice versa.

Adjust hood cable control free of play on lower portion of lock.