

88–400 Removal and installation of radiator shell

Removal

- 1** Open engine hood.
- 2** Remove nine screws with corrugated washers on radiator grille from the rear.
- 3** Remove radiator grille with intermediate layer.

Installation

- 4** For installation proceed vice versa.

Make sure that the intermediate layer is glued to radiator grille.