


91–100 Removal and installation of driver's seat


1st version driver's seat

Removal

- 1 Slide seat completely forward.
- 2 Loosen safety belt on outer end of seat.
- 3 Remove carpet behind driver's seat.
- 4 Remove screw (1) on connecting plate (2) as well as screw (3) at seat height adjustment (4).
- 5 Slide seat completely back.
- 6 Remove screws on both sides on seat guide rails front.

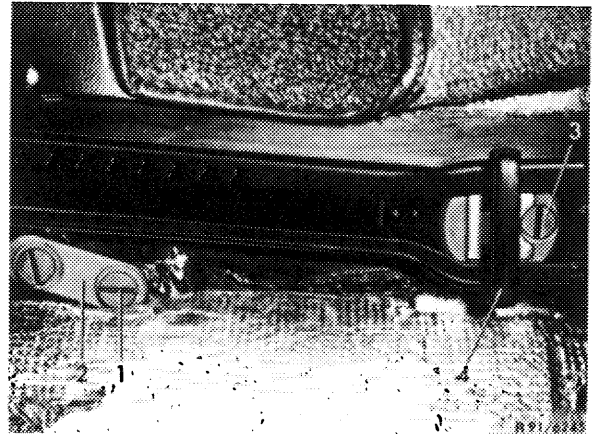

- 7 Pull vacuum hose from distributor (on model 107.02 only) and remove driver's seat.

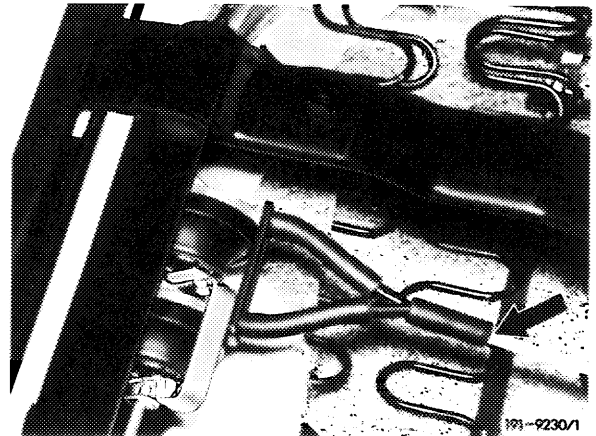


Installation

- 8 For installation proceed vice versa.


2nd version driver's seat

Removal

- 1 Remove front and rear floor mats.
- 2 Slide seat forward.
- 3 Detach safety belt from seat outer side.
- 4 Unscrew rear securing screws of the seat guide rail on both sides and detach guide jaws.
- 5 Slide seat completely back.

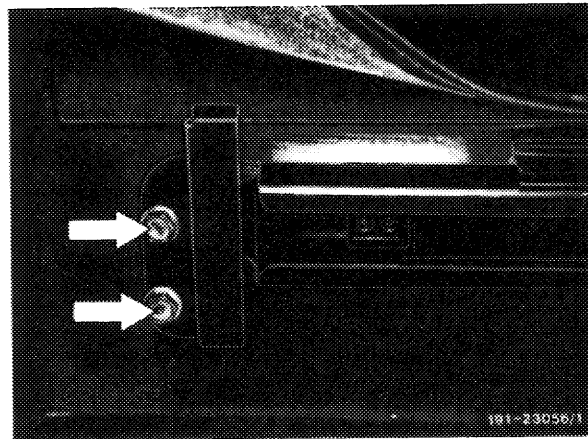


- 6 Unscrew forward screw of seat guide rail on both sides.

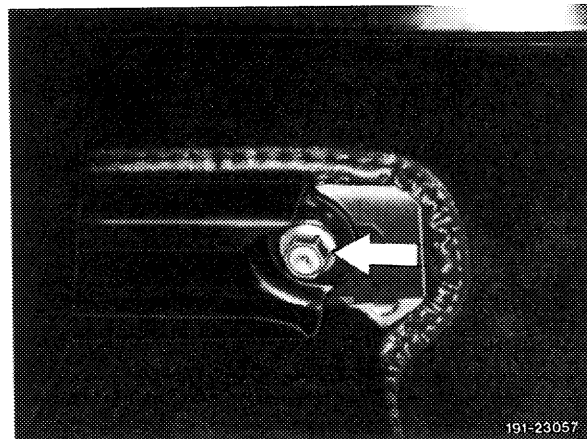

- 7 Slide seat somewhat to the rear and lift it up while disengaging the seat guide rail from the mount of the seat height adjuster.

- 8 Take out seat.

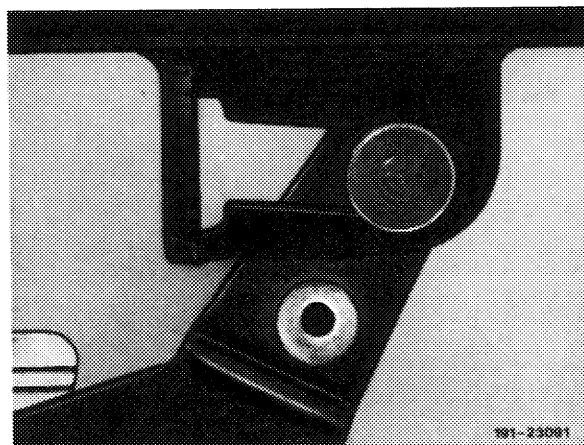

Installation

- 9 Slip seat with seat guide rail into the mount of the seat height adjuster and secure guide rail at front end on LH and RH sides.
- 10 For further installation, proceed vice versa.
- 11 Function-test seat adjusting mechanisms.