

91–140 Bearing bolt on driver's cushion frame, driver's backrest

Special Tool


Pin spanner DIN 1810, dia. 25–28 mm

180 589 01 05 00

Bearing Bolts on Driver's Cushion Frame

Removal


- 1 Remove driver's seat (91–100).
- 2 Fold backrest forward.
- 3 Loosen cross hole nut (2) by means of pin spanner (1).
- 4 Unscrew bearing bolt (3).

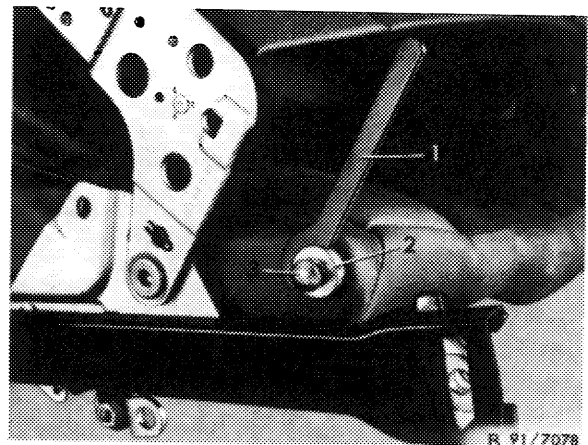

Installation

- 5 For installation proceed vice versa.
- 6 Adjustment of bearing bolt:
Adjust bolt to dimension „a“ approx. 2 mm in such a manner that seat fittings are not chattering and are not resting laterally against tunnel.
- 7 Counterlock cross hole nut (2) with pin spanner (1).

a = approx. 2 mm
2 Cross hole nut
3 Bearing bolt
4 Safety hook
5 Seat fittings

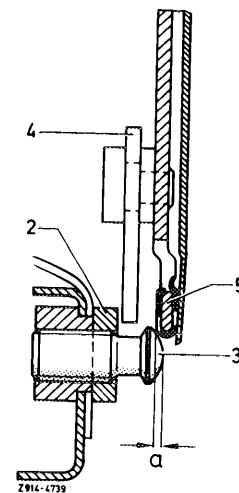

Driver's Backrest

Removal

- 1** Remove driver's seat (91–100).
- 2** Lift off cover molding lower half left and right.
- 3** Unscrew cheesehead screw on driver's cushion left and right.
- 4** Lift-off driver's seat backrest.

Installation

- 5** For installation proceed vice versa.