

83–650 Removal and installation of ETR-switch

Data


Shutoff point of refrigerant compressor

2 °C (36 °F)

Removal


- 1 Remove glove box (68–140).
- 2 Remove blower motor (83–120).
- 3 Pull off electric flat plug.
- 4 Unscrew two screws at right and left of ETR-switch (24).

24 ETR-switch

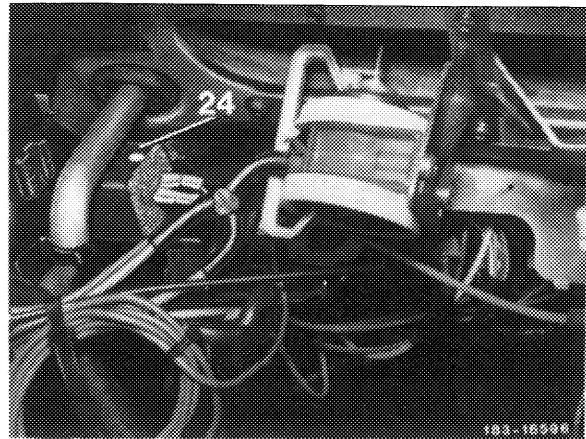


- 5 Pull ETR-switch (24) carefully to the rear and then pull capillary of ETR-switch out of evaporator in air conditioner cabinet.

24 ETR-switch with capillary

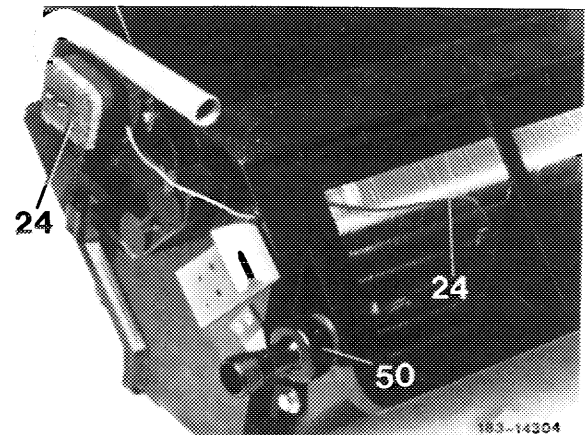

Installation

- 6 Insert capillary of ETR-switch in-between ribs of evaporator up to mark. Then glue a moltoprene strip, refer to fig. (arrow), on capillary and evaporator ribs.

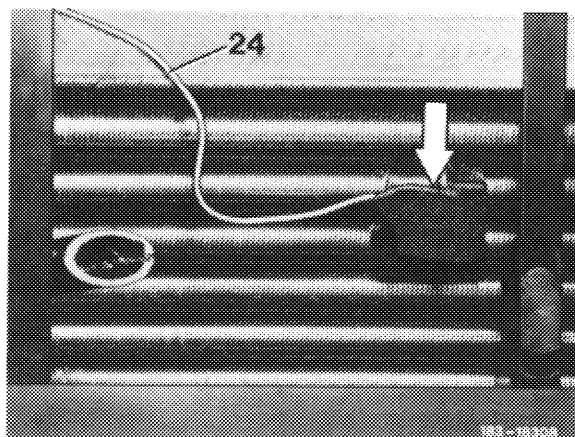

7 Screw ETR-switch (24) with two screws to air conditioner cabinet, then plug insulating housing on ETR-switch and attach with insulating tape.

8 Mount electric flat plug.

9 Install blower motor (83-120).

10 Install glove box (68-140).

11 Check operation of automatic climate control (83-601).

