


Removal

- 1 Remove glove box (68–140).
- 2 Remove air duct for lateral ventilation at the right.
- 3 Pull off electric plug.
- 4 Unscrew amplifier (6) from holder on evaporator housing.

- 6 Amplifier
- 24 ETR-switch
- 38 Specified leak point
- 44 Double-acting vacuum element
- 44a Single-acting vacuum element

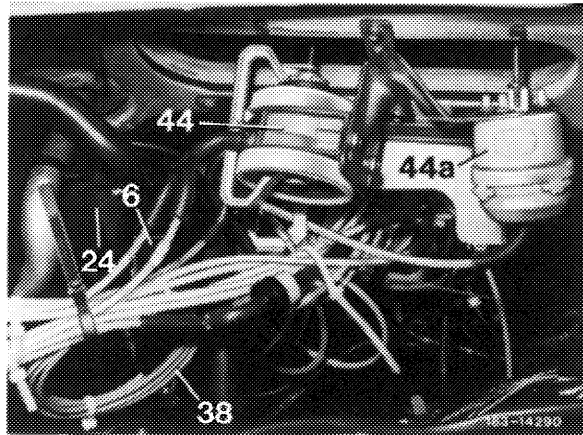

Installation

- 5 Screw amplifier (6) to holder on evaporator housing.
- 6 Mount electric plug.
- 7 Reinstall air duct for lateral ventilation at the right.
- 8 Install glove box (68–140).