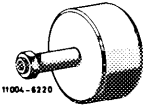



05—330 Removal and installation of tension rail

Tightening torques	Nm
Bolts for cylinder head cover	3
Mounting bolt for camshaft sprocket	100

Special tools

Impact puller for bearing bolt (basic unit)		116 589 20 23 00
Threaded bolt M 6 x 50		116 589 01 34 00

Note

The timing chain is guided in the cylinder crankcase by means of 2 slide rails and is tensioned by the chain tensioner via a tension rail.


The tension rail is guided by a floating pin in crankcase and timing case cover.

The tension rails of engines 116.96 and 117.96 are different in length and differ in shape from those of cast-iron engines.

The thrust pin of the tension rail was relocated in an inward direction and centered.


The tension rail lining (3) of all engines 116 and 117 can be replaced in the case of repairs.

- | | | |
|---|---------------|-----------------|
| 1 | Tension rail | |
| | Engine 116.96 | 117.96 |
| | a = | 133 mm 160 mm |
| 2 | Tension rail | |
| | Engine 116.98 | 117.98 |
| | b = | 133 mm 161.5 mm |
| 3 | Lining | |
| | Engine 116 | 117 |
| | c = | 184 mm 208 mm |

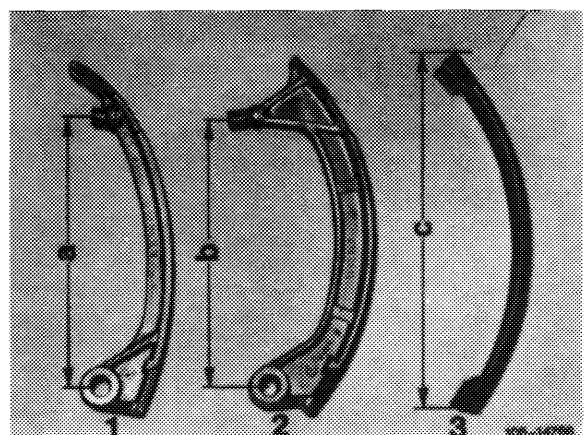


Removal


- 1 Remove slide rail in right-hand cylinder head (only engines 116.960/961, 117.960/961).
- 2 Remove chain tensioner (only engines 116.962/963/964/965, 117.962/963/964/965/967/968).

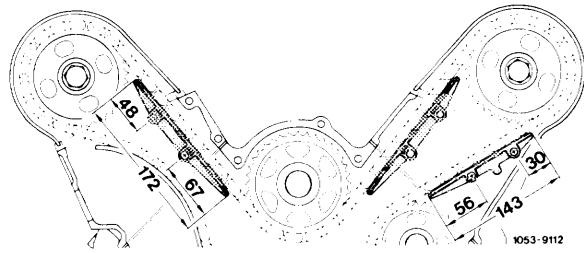

- 3 Mark right-hand camshaft sprocket and timing chain with paint.
- 4 Remove right-hand camshaft sprocket.

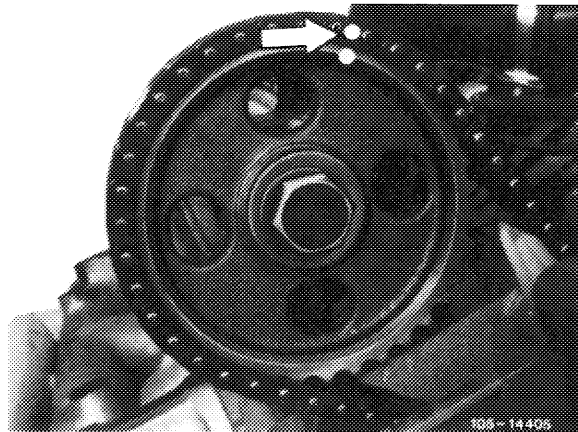


- 5 Unscrew closing plug (arrow).

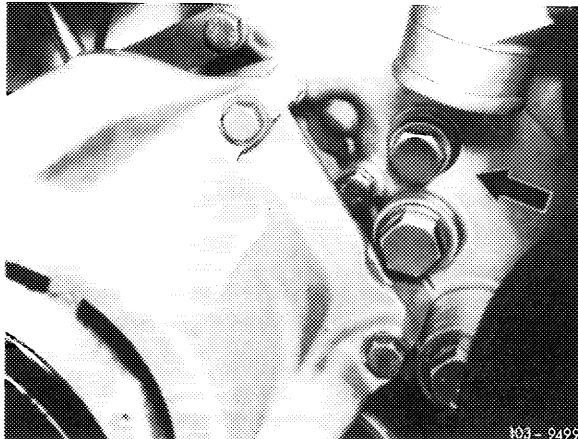


Engine 117 

- 6 Cant bearing pin of tension rail with a bolt M 8 or a screwdriver and pull out.

Note: The bearing pin is hollow (inner dia. 8.8 mm) and a floating fit (light sliding fit) in the crankcase and timing case cover.

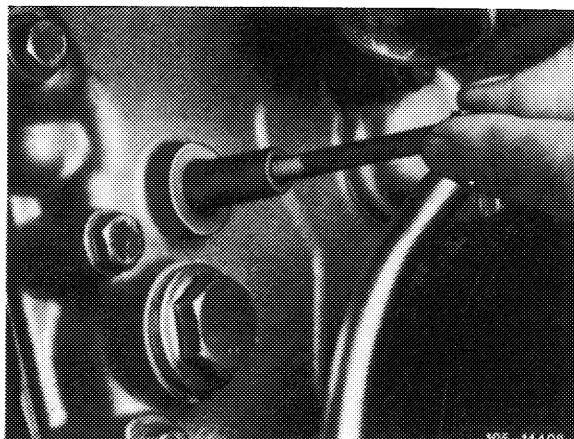

7 Remove tension rail.

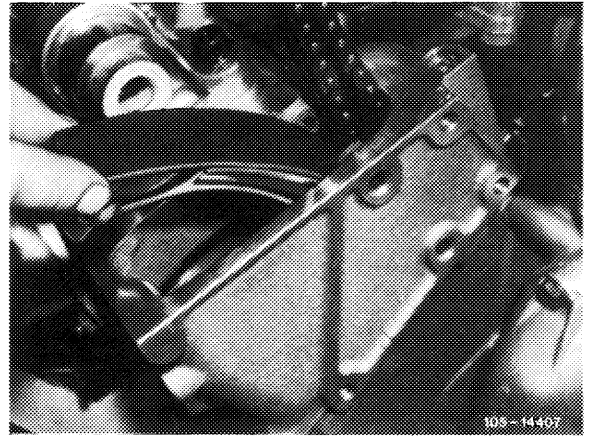


Installation

8 Insert tension rail between timing case cover and timing chain.

9 Insert bearing pin and drive in fully.

10 Install closing plug with sealing ring.

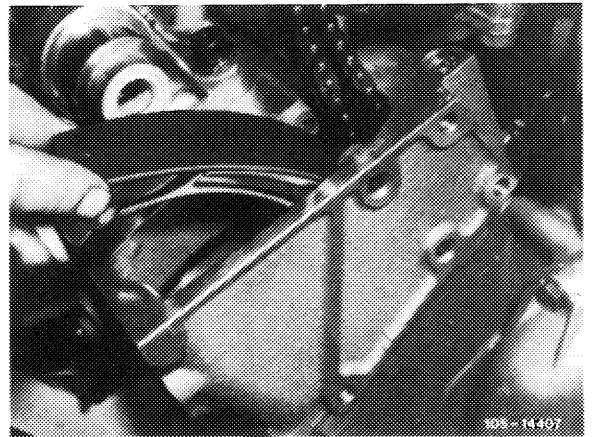

11 Mount camshaft sprocket so that the collar on camshaft sprocket (arrow) faces toward the camshaft.

12 For further installation proceed vice versa.

