

## 07.3—220 Renewing air flow sensor

---

Job No. of flat rates or standard texts and flat rates data 07—1586.

### Note

---

The safety switch on air flow sensor is no longer installed. Its function is now performed by an electronic relay (for functional description refer to 07.3—001). On vehicles with safety switch, convert switch when renewing air flow sensor (see 07.3—242).

On vehicles with optional trip computer, the air flow sensor is equipped with an air flow sensor potentiometer.

### Renewing

---

- 1 Remove and install mixture control unit (07.3—200).
- 2 Remove and install fuel distributor (07.3—205).
- 3 Screw on adjusting device included in delivery. Tighten tear-off screws until screw heads are breaking off.

