

07.3-281 Renewing holder for fuel pump, fuel filter and fuel reservoir


For renewing holder,
remove
fuel reservoir (07.3-270),
fuel filter (07.3-275),
fuel pump (07.3-280).

Note

The holder has been modified to improve installation position and to increase rigidity.

Model 107

A Former version
B Present version

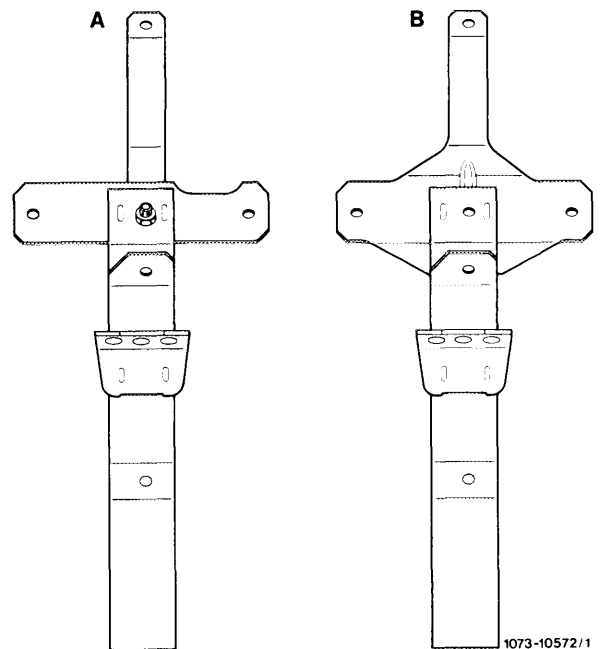

Shape of fuel line between pump, filter and reservoir
has also been modified on model 126.

Start of series: November 1981.

Model 126

A Former version
B Present version

