
## 07.3-216 Removal, reinstallation of insulating sleeve

Preceding operation:

Removal, reinstallation of injection valves (07.3-215)

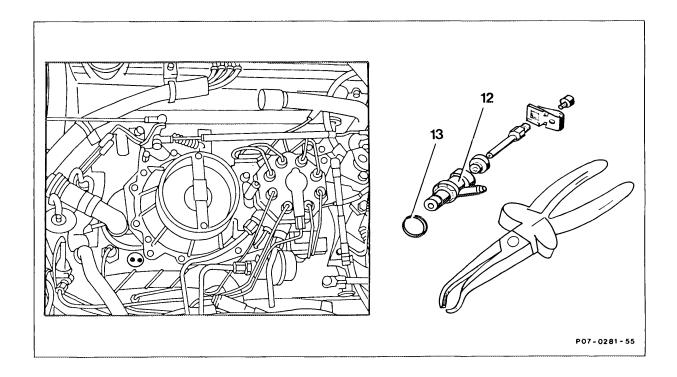

Ground cable on control bearing pedestal . . . . rear left, disconnect, reconnect. Shaped hose for auxiliary air . . . . . remove, mount.

Insulating sleeve (12) . . . . . . . with pulling pliers pull out, fit.

O-ring (13) . . . . . . . . . . . . renew.

## Commercially available tool

Pulling pliers ZSA m1

e.g. Beru, D-7140 Ludwigsburg Beru order No. 2 908 847 002