



## 07.3-269 Removal, reinstallation of fuel pump assembly

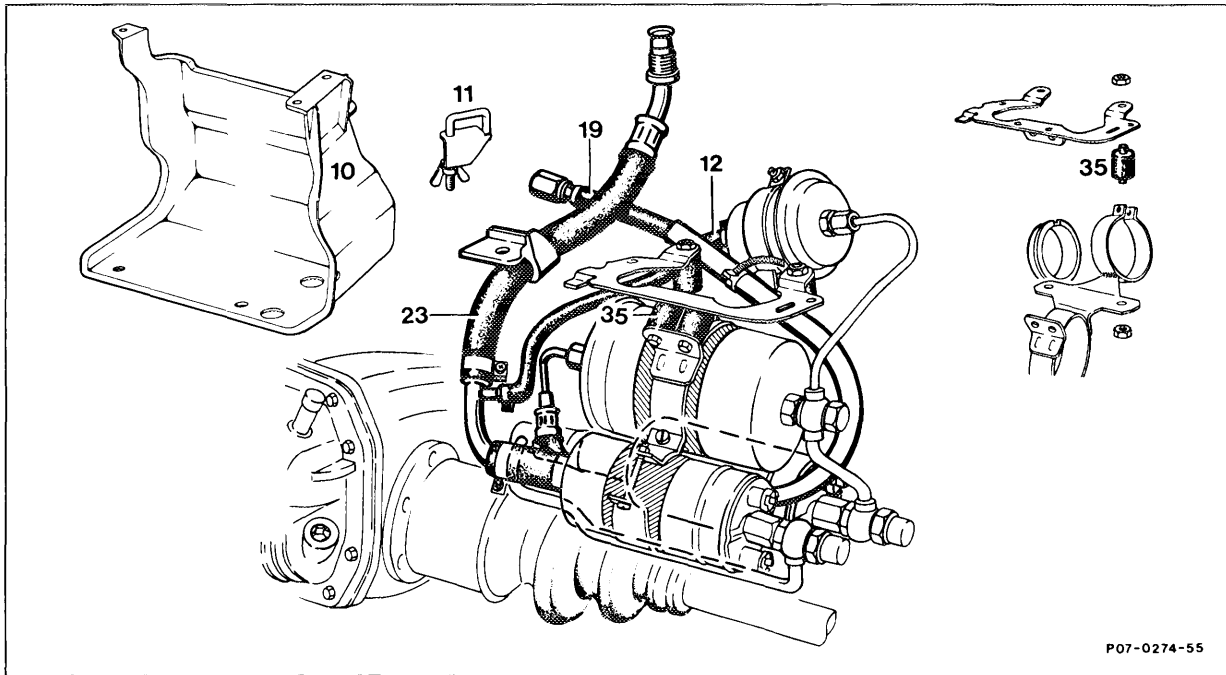

P07-0274-55

Pressure in fuel tank	release by opening screw cap.
Battery	disconnect, reconnect.
Protective box (10)	unscrew, screw on.
Electrical wiring	disconnect, reconnect.
Fuel suction and delivery hoses (19 and 23)	pinch with clamp (11) and remove. Special tool 000 589 40 37 00
Fuel suction, leak-off and delivery hoses (12, 19 and 23)	unscrew, screw on.
Rubber buffer (35)	remove, reinstall.

### Special tool

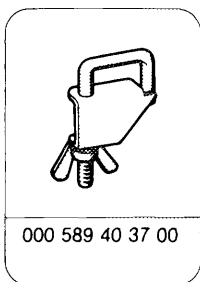

000 589 40 37 00