All models

Special tools

Radiator tester



001 589 48 21 00

Radiator cap with hose



605 589 00 25 00

Notes

Attention! Check seals and gaskets on **cold engine** only.

Watch out for correct location, porosity, hardening, swelling, cracks and **chafing marks** of cooling and heating water hoses. Be sure to renew damaged hoses.

- Fill radiator in the prescribed manner.
- Place radiator tester in place of radiator cap on the radiator and lock.
- Then produce a pressure of 1.0 to 1.3 bar (atü) in the cooling system by pumping.
- Check all cooling and heating water hoses and connections for water loss.
- If necessary retighten hose clamps.

Attention! To check the cooling and heating system on model 123, use radiator cap with hose part. no. 605 589 00 25 00, since otherwise damage to closing plug on radiator will be unavoidable. For the above purpose, pull rubber sealing cone from air pump and plug on closing cover included in delivery. This combination permits checking all radiators, so that there is no constant need for converting tester.



