

## **Instruments and Controls**

*For more detailed descriptions see specified pages.*

- 1** Adjustable air outlets (page 22)
- 2** Slide lever for adjustable air outlets (page 22)
- 3** Parking brake release knob (page 60)
- 4** Hood release handle (page 72)
- 5** Parking brake pedal (page 60)
- 6** Combination switch (page 41)
- 7** Exterior lamp switch (page 40)
- 8** Instruction tag (except tourist vehicle).  
Use only premium unleaded gasoline
- 9** Cruise control (page 62)
- 10** Instrument cluster (page 12)
- 11** Horn control, airbag (page 36)
- 12** Steering lock with ignition/starter switch  
(page 39)
- 13** Adjustable air outlets (page 22)
- 14** Outside temperature indicator (page 67)
- 15** Rear window defroster switch (page 44)
- 16** Automatic antenna switch (page 57)
- 17** Front dome lamps switch (page 45)
- 18** Radio (page 50)
- 19** Air recirculation switch (page 22)
- 20** Automatic climate control (page 22)
- 21** Ashtray with lighter (page 43, 91)
- 22** Left power window switch (page 45)
- 23** Left seat heater switch (page 32)
- 24** Hazard warning flasher switch
- 25** Right seat heater switch (page 32)
- 26** Right power window switch (page 45)
- 27** Adjusting switch for exterior mirror on front  
passenger side (page 42)
- 28** Glove compartment, illuminated (only with key in  
steering lock positions 1 or 2)  
To open, slide handle sideways
- 29** Loudspeaker cover, right and left

