

Indicator Lamp Symbols

Function Indicator Lamp



High beam

Warning Lamps

(should go out with the engine running unless)



Battery not being charged.
See page 65




Brake fluid low (except Canada).
Parking brake engaged.
See pages 60, 65




Brake fluid low (Canada only).
Parking brake engaged.
See pages 60, 65.



Brake pad wear.
See page 65

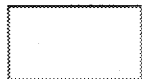

Engine oil level low.
See page 65

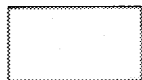

Coolant level low.
See page 66



Fluid level for windshield
washer system low.
See page 66



Exterior light failure.
See page 66



ABS malfunction.
See page 64



SRS malfunction.
See page 36



Engine malfunction.
If the lamp comes on when the engine
is running, it indicates a malfunction of
the O₂-sensor on Federal version ve-
hicles, and injection system or emission
control system on the California version
vehicles. In either case we recommend
that you have the malfunction checked
as soon as possible.
See page 68



Seat belt reminder lamp
See page 33