

### Exterior Rear View Mirrors


The exterior mirrors have electrically heated glass. The heater switches on and off automatically, depending on outside temperature.

Driver's side:

The exterior mirror (2) can be adjusted from inside the vehicle by moving adjusting lever (1) in the desired direction.

Passenger-side:

The passenger-side exterior mirror is convex (outwardly curved surface for a wider field of view).

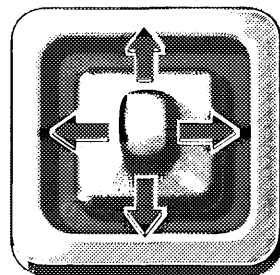

3266


### Caution!

Exercise care when using the passenger-side mirror. Objects in mirror are closer than they appear.

To adjust the mirror:

Turn key in steering lock to position 2. The exterior mirror can be adjusted using the switch. Adjust the mirror so you can just see the side of your vehicle in the portion of the mirror closest to the car.

Note: If the mirror housing is forcibly pivoted from its normal position, it must be repositioned by applying firm pressure until it snaps into place.

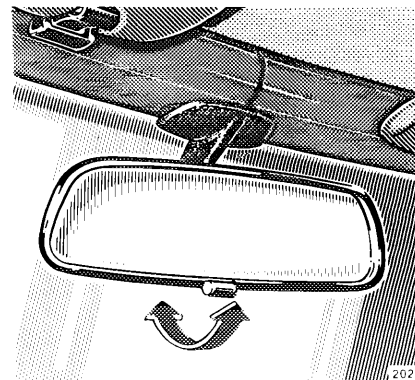

2022

### Inside Rear View Mirror

The mirror can be tilted to the anti-glare night position by means of the lever at its lower edge.

Use your inside mirror to determine the size and distance of objects seen in the passenger-side convex mirror.