

Interior Lamps

The switch for the front dome lamps has 3 positions.


Position 1: the lamps are switched on and off (delayed, however, there will be no delay when the key is in steering lock position 2) by the door contact switches.

Position 2: lamps are switched off continuously.

Position 3: lamps are switched on continuously.

Power Windows

The power windows can only be operated with the key in steering lock position 2.

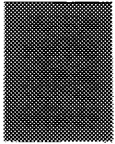

Operation