


Hood

To open:

Pull hood release handle located on the left side panel below the instrument panel. The hood releases to the safety catch stop.

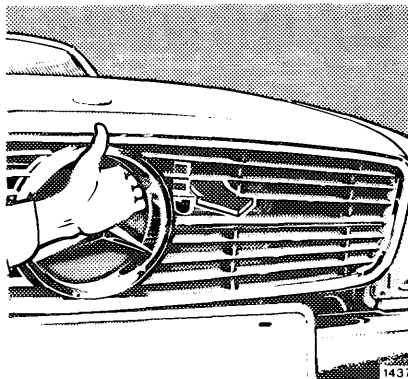

Reach through the opening of the star in the grill and pull the safety catch lever behind the radiator grill in the direction of the arrow, and raise the hood (be sure that wipers are resting on windshield).

To close:

Push hood down firmly.

Warning!

To help prevent personal injury, stay clear of moving parts when the hood is open and the engine is running. Be sure the hood is properly closed before driving.

The engine is equipped with a transistorized ignition system. Because of the high voltage it is highly dangerous to touch any components (ignition coil, distributor, spark plug sockets, ignition cables, diagnostic socket) of the ignition system

- if the ignition is "on" and the engine turned manually
- while starting the engine
- with the engine running.