


### Manual Release of Fuel Filler Flap

If the central locking system does not release the fuel filler flap automatically, access to the actuating vacuum element may be gained through the trunk. Pull down right trunk panel slightly and pull back the knob (arrow) on the vacuum element while opening the filler flap.

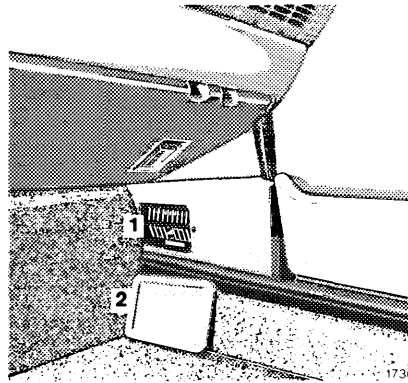

### Fuses

The fuse box (1) is located in the RH side foot well.

All equipment protected by fuses are listed by number and letter on a label in the cover (2). The numbers and letters above the fuses correspond to the ones on the label.

Fuses must not be repaired or bridged. Always use a new fuse for replacement.

Spare fuses (observe amperage and color) are stored with the vehicle tool kit.

Diagnose the cause of a short circuit before replacing a blown fuse.

