

## Towing the Vehicle

The front towing eye is located on the passenger-side below the air-dam and the rear towing eye on the passenger-side below the bumper.

We recommend that the vehicle be transported using flat bed equipment. This method is preferable over other types of towing.

The vehicle may be towed with all wheels on the ground and the selector lever in position "N" for distances up to 120 km (75 miles) and at a speed not to exceed 50 km/h (30 mph).

To positively avoid a possibility of damage to the transmission, however, we recommend to disconnect the drive shaft at the rear axle

drive flange on any towing beyond a short tow to a nearby garage.

Do not tow with sling-type equipment.

Towing with sling-type equipment will damage radiator and supports.

Use wheel lift or flat bed equipment only.

