


Ashtray

Removal of ashtray:

Pull out ashtray up to the stop. Depress center locking spring (1) and remove ashtray.

To install ashtray:

Position ashtray squarely and push in.

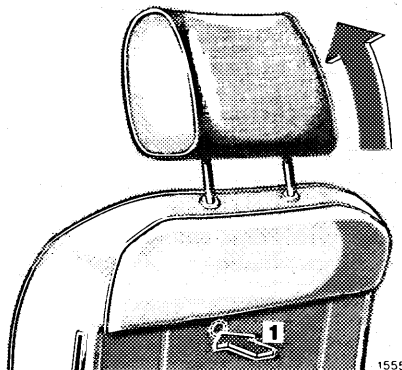

Head Restraints

Removing head restraints:

Move the head restraint slightly forward and pull up to the stop.

Depress release button (1) beneath the seatback covering material and pull head restraint up sharply, holding it by the left head restraint post (viewed in driving direction). Then pull out head restraint completely with both hands.

The release button (1) is located below the left head restraint post on both seats.

Installing head restraints:

Insert the head restraint and push it down.

Adjust head restraint to the desired position.

Warning!

For your protection, drive only with properly positioned head restraints.

Do not drive the vehicle without the head restraints. Head restraints are intended to help reduce injuries during an accident.

For positioning of head restraints refer to page 31.