

## Replacing Windshield Wiper Blades

Remove key from steering lock before replacing a wiper blade.

## Removal:

Fold wiper arm forward and rotate wiper blade until perpendicular to wiper arm. Press safety tab and slide wiper blade out of wiper arm.

## Installation:

On the driver side, slide the wiper blade onto the wiper arm into one of 3 positions, so that it wipes to the top edge of the windshield but does not contact the windshield moulding.

On the passenger side, slide the wiper blade with plastic pivot onto the wiper arm until it locks in place.