


a) Testing check valve

1 Pull check valve (36) out of 3-point distributor (a) of red/grey and red/green vacuum line and connect tester (refer to arrow), evacuate and read on pressure gauge.

2 If pressure gauge shows a pressure increase, replace check valve (36).

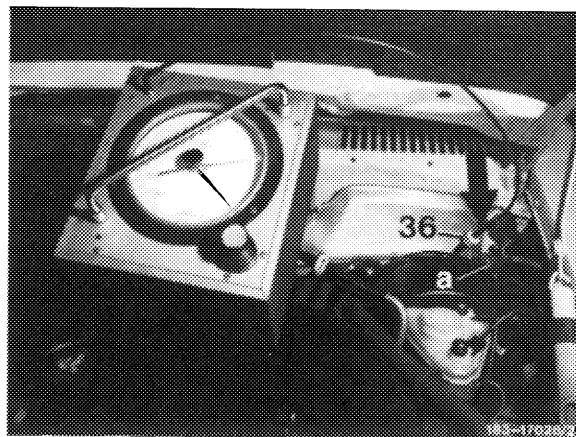

b) Testing vacuum reservoir with red/grey vacuum line for leaks

3 Pull vacuum line red/grey (e) out of 3-point distributor (a) and connect tester (refer to arrow), evacuate and read on pressure gauge.

4 If readout on pressure gauge changes, remove reservoir and check for leaks, replace if required (83—163) or renew red/grey vacuum line.

