


Removal

Note: Always replace lining following removal.

- 1 Loosen lining inside (1).
- 2 Unbend tab (2) of fastening rail.
- 3 Remove fastening rail from anchoring of top well lid.
- 4 Remove fastening rail together with lining.
- 5 Loosen lining and Moltopren layer from rail.

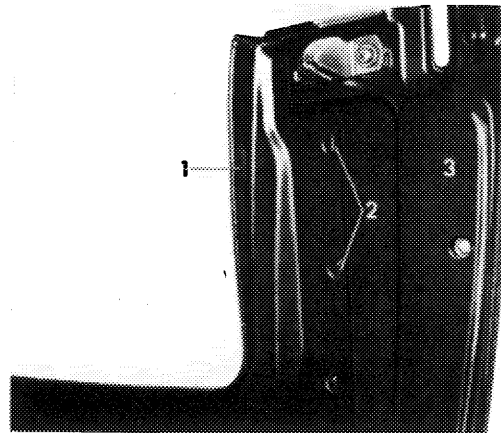

R 75/6981

Installation

- 6 For installation proceed vice versa.
Remove glue residuals with test gasoline. Glue lining back to rail.