



Removal

- 1 Remove screws on molding (1).

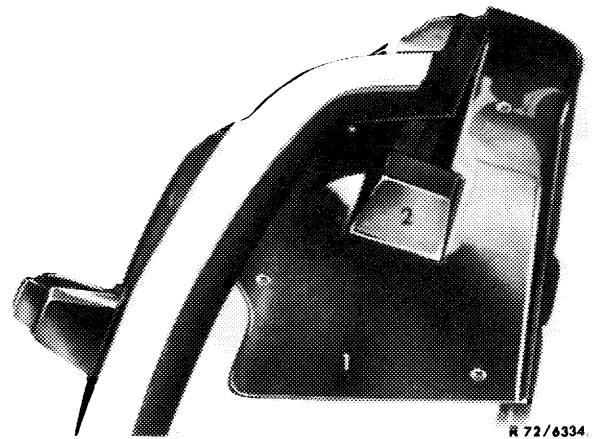


- 2 Insert assembly shim (3) between guiding bracket (2) and molding (1).

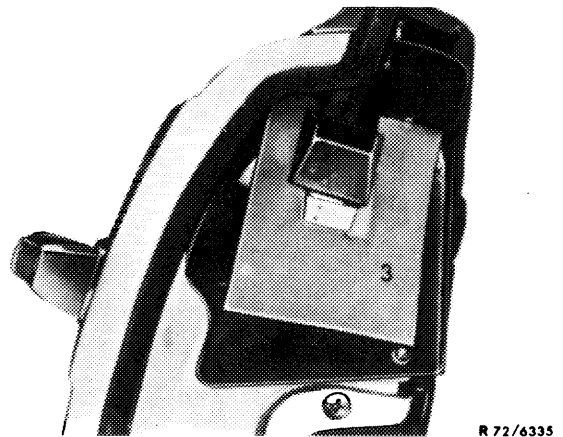

Note: The assembly shim is cut from a plastic sheet 0.6 mm thick according to the figure.

- 3 Carefully slide molding downwards and lift slightly with plastic wedge at top of door lining, if required.

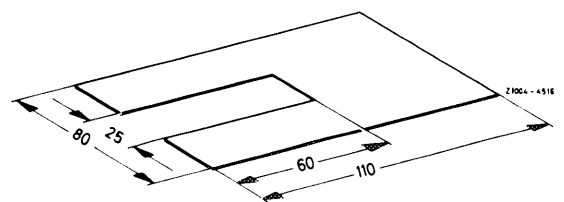

0.6 mm thick

Installation

- 4 For installation proceed vice versa.