
# 1st version center console


Installed into model	up to chassis end number
107.042	011 568
107.045	009 131
107.046	000 986

## Removal


- 1 Remove steering wheel (46-610).
- 2 Remove driver's and front passenger's seat (91-100).
- 3 Remove both floor mats in front.
- 4 Remove cover on shift lever (68-230).
- 5 Remove both covers under instrument panel (68–150).
- 6 Remove screws (1) at rear tunnel.
- 7 Loosen carpet (2) on tunnel from center console.

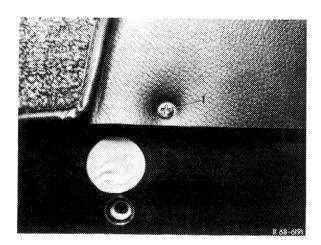


- 8 Remove screws (3) left and right on front wall.
- 9 Pull out heater control lever.

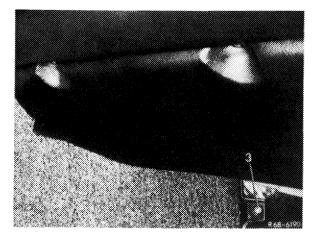


**10** Force molding (4) on control levers at upper end out of housing with plastic wedge.

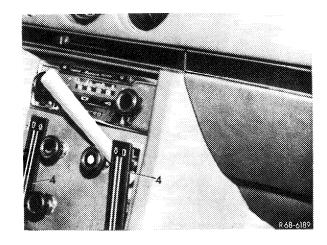

- 11 Unscrew the two screws (5) on cover (6).
- 12 Remove cover with switches and pull off plugs.
- 13 Remove radio.

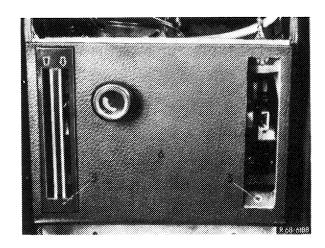

- 14 Remove screws (7).
- **15** Disconnect connecting cable for both lights (8) on cable connector (9) and pull off lighting cable (10).
- **16** Only with automatic transmission: Loosen gate plate on floor shift.
- 17 Remove center console in rearward direction.

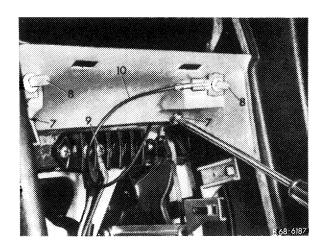

#### Installation


18 For installation proceed vice versa.

#### 2nd version center console


Installed into model	up to chassis end number
107.042	011 569
107.045	009 132
107.046	000 987

#### Removal


- 1 Push front seats to the rear and take both floor mats out of front footwells.
- 2 Remove ashtray with frame.
- 3 Remove cover of heater control switch downward and pull off electrical connections.

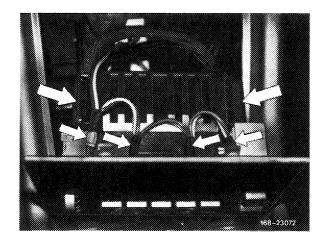


- 4 Remove screws (arrows) on forward cover and pull out cover to the rear.
- 5 Pull plug connector from hazard warning flasher switch.
- 6 Remove radio.

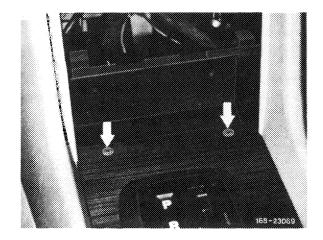


7 Remove LH and RH radio clips.

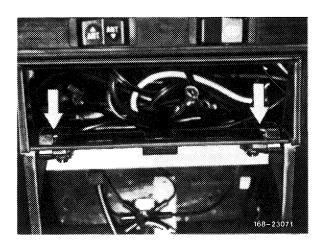


- 8 Unscrew both screws on center console forward end.
- 9 Remove accelerator.

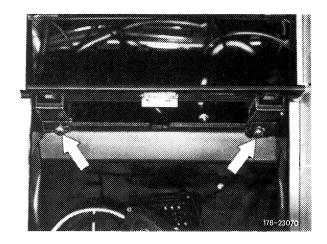

10 Remove screws on the forward end of the footwell, LH and RH sides.

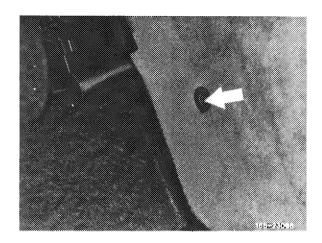

- 11 Remove rug from oddments tray and unscrew securing screw.
- 12 Remove screws of tunnel covering and loosen forward end of covering.
- 13 Remove arm rest at driver's seat.
- 14 Push both seats to the rear.

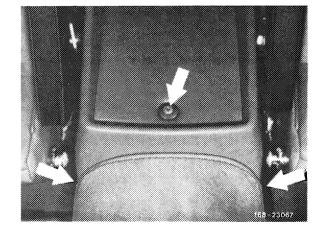


15 Lift up center console at rear end and pull to the rear by approx. 90 mm. In doing this, pull outward the lateral sections of the covering in the region and rest them on the cross member.

### Caution:

To prevent damage, use a rag to cover up the center console end which joins the instrument panel.

16 Pull out center console to the rear and take it out above the front passenger seat.

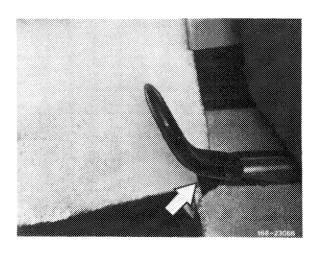

## Installation

17 Install center console by pushing it from the rear to the front .

**Note:** To prevent damage to the instrument panel, cover up the center console upper region with a rag during the installation.

- 18 Bolt on center console forward end.
- 19 Further installation takes place in reverse order.